


- Avoid installation behind doors or in choke points
   Install on flat walls Keep the right side of the dryer away from a mirror or wall
  - at least 100mm above
- I uere must be clear space at least 400mm below the unit and
- IUG 10110WING PICTURE Shows the recommended installation location

#### Recommended installation location:

- In direct sunlight, or strong light
   Inatiect sunlight, or strong light
   Inat is filled with corrosive, oxidizing or reducing gas
   Inat is over 2000m above sea level
   Inat is over 2000m above sea level I ust is directly sprinkled with water or where condensation torms easily
  - Vhere the temperature is less than -10°C or over 40°C

Do not install in the following places:

#### NOITAJOJ NOITAJJATSNI DNA PRECAUTIONS BEFORE INSTALLATION

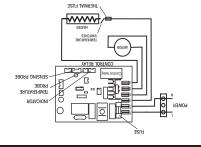

#### MARDAID JADIRTOELE

# CHECK INDICATOR HEATER иросток 3TAJ932A8 MOTOR AIR INLET PANE ALLEN WRENCH SCREWS COUNTERSUNK

#### SAMAN TRAY

- Automatic nearing system
- Auto-stop function: the built in timer will stop the unit after 45 seconds
  - Elegant stainless steel shell
    - Easy to maintain

  - Mo touch hand drying increases hygiene
     Eliminates need for paper towels

#### **SARUTAA**

retailer for recycling advice. Electrical waste products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recurling advice

Environmental Protection



# circuit supplying the bathroom. Ask your installer for details and advice. For additional protection, the installation of a residual current device(RCD) having a rates residual operating current not exceeding 30mA is advisable in the electric current not exceeding 30mA Ack your installer and per

- If the cord is damaged, it must be replaced by the manufacturer, service agent or similarly qualified person in order to avoid a hazard.
- A This appliance is not intended for use by persons including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised and/or have been instructed on the proper use of the machine from a person responsible for their safety.

  If the cond is damaged, it must he renlaced hy the
  - bower source. ♣ Do not install when the machine is connected to a

    - Machine must have reliable ground connection.
- If the machine doesn't work or is behaving a cut off power, close leakage circuit breaker a supplier to check and repair.
  - Air filter must be installed
- Power must be cut off during maintenance to eliminate the risk of electric shock.
- If using with other appliances, the socket may produce abnormal heat leading to fire.
  - Use dedicated socket
- fire, electric shock, and/or machine malfunction If power tolerance is over +/- 10%, there will be breakdown. Incorrect power supply usage will lead to
  - Rated power is required
- This may cause electric shock, fire, or personal injury Do not modify or disassemble the unit unnecessarily.

malfunction.

may form. This may cause electric shocks or unit Do not use in a wet environment, where it may come into direct contact with water or where condensation

. Do not let the unit get wet, it can cause electric shocks

Do not let children hang from the unit, this may cause the unit to fall

Do not open the front panel. There is the risk of electrocution

If you don't use this unit properly or follow the safety guidelines carefully, it can lead to serious betsousl injury and property damage



 
4.1kg	W.N	W027-029	Heating power
mm271x20Ex21E	Арреагалсе size	S2S Kbh	beeds bniW
١٢٨٩١	Protection class	1450W	ınduı
15-20cm	Sensing distance	Single-phase	Phase
Brush motor	NotoM	AC120V	Voltage

SPECIFICATIONS

# **INSTALLATION METHOD**

#### 1 Connect the Line

· When installing the dryer without a junction box, install a two-hole standard outlet above the right side of the hand dryer that corresponds to the dryer The distance should be 20-50cm.




SHELL

- 2 Remove the Shell
  - Use an Allen wrench to remove two countersunk screws from the the shell
  - Carefully lift up the shell to avoid scratching the cover



 When connecting, the wire length should exceed 2cm to the terminal block. The Fire line must be connected at the L position, null line at the N position and earth line connected at the 
 ⊕ position.



ALLEN WRENCH

# 4 Reattach the Shell

Tighten the 2 countersunk screws on the shell.



 
## **TEST RUN**

	STEPS	CONFIRM THAT:	BE AWARE
1	Shake the machine gently	The machine is secure and does not shake	The machine will shake noisily when not firmly installed
2	Check the power and voltage	The rated voltage is being used	Accidents can occur and the machine will burn out if incorrect power is used
3	Switch on the power	Close external power supply switch or insert the power plugs	The power socket must match the machine plug. Check the power when the indicator light is dim
4	Insert hands to activate dryer	Air blows from the dryer at a high speed	Make sure hands are close to the sensor if the dryer doesn't activate

# DAILY USE AND MAINTENANCE

#### External Maintenance

Wipe with a soft dry cloth.
Use a soft cloth dampened with neutral detergent if the unit becomes excessively dirty. Then wipe with a dry cloth. Do not use organic solvents, acid or alkali toilet cleaner, cleaning brushes, etc.






## Cleaning the Air Filter

Clean filter semi-annually or when the air speed decreases.

 - Open the air inlet panel, pull the air filter out
- Tap the filter lightly or use a vacuum cleaner to suck away dust. A brush can also be used, or the filter can be cleaned directly with water. Reuse after dried.
- Reattach to the unit once clear





## **PACKING LIST**

INCLUDES: MAIN MACHINE (1) 5x25mm SELF TAPPING SCREW (4) 5mm EXPANSION PIPE (4) USER MANUAL (1) ALLEN WRENCH (1)





GCA292ULTRA USER MANUAL

LIFEWITHPEARL.COM